

---

**TAP FUNCTIONS:****SPARKLING FILTERED WATER****CHANGING THE CO2 CANISTER**

When the sparkling water tastes flat it is necessary to change the gas canister.

The integral CO2 gas canister is sited on the left hand side at the front of the unit (see diagram on previous page).

Please follow the instructions below to ensure your CO2 canister is correctly installed:

- 1 To remove a canister unscrew in an anticlockwise direction.
- 2 Locate the thread on the regulator where the gas canister will connect.
- 3 Carefully present the canister ensuring the canister is supported.
- 4 Rotate the canister in a clockwise direction being careful not to cross thread the regulator.
- 5 Rotate until you hear a hissing sound. This is the gas being released from the canister. It is important to keep screwing until you can no longer hear this hissing.
- 6 When the canister cannot be turned further it is safely connected. Do not turn the canister any further as this will damage the regulator.
- 7 Press the glass icon button and run off an amount of sparkling water to re-calibrate the system.

**Note:**

While removing a canister it is important to support its weight to avoid the canister dropping onto the floor.

When the canister is removed check that the black 'O' ring is still in place on the regulator and not attached to the canister.