
QUATREAU™

Touch

User Guide

QUATREAU TOUCH
BOILING WATER WITH TOUCH SAFETY
SEQUENCE

For safety the Quatreau Touch system features a three touch sequence to activate the boiling water function.

The numbers on each control quadrant in the diagram to the right indicate the three areas that must be pressed within three seconds to activate.

The screen in the middle of the panel will display 'boiling' and the top left control quadrant (cup icon) will flash red several times before illuminating red.

To turn off the boiling water press once any of the four control quadrants.

QUATREAU TOUCH
BOILING WATER - ADJUSTING THE FLOW

The rate of water flow can be adjusted using the pressure reducing valve on the left hand side of the QT553-B.

Turn clockwise to increase flow of water and counter-clockwise to reduce the flow.

To unlock simply pull the device out until it clicks. Adjust and re-lock by pushing it back in until it clicks.



QUATREAU TOUCH
CHILLED WATER

To activate chilled water press the top right control quadrant (snowflake icon) once.

When the tap is releasing chilled water the top right snowflake will illuminate white and the central screen will display 'chilled'.

To turn this function off press the top right control quadrant (snowflake icon) once.



QUATREAU TOUCH
SPARKLING FILTERED WATER

To activate sparkling filtered water press the bottom right control quadrant (glass icon) once.


When the tap is releasing sparkling water the bottom right glass icon will illuminate blue and the central screen will display the message 'sparkling'.

The sparkling water function will run for 30 seconds (earlier models have an 8 second timeout) before automatically switching itself off.

Note:

If the sparkling water is spluttering or is not carbonated enough the system will require adjustment.

If your chiller carbonator pump activates when the tap is not in use activate the sparkling on the tap for one second to open the inlet valve that supplies the chiller carbonator pump, failure to do so could lead to damage.

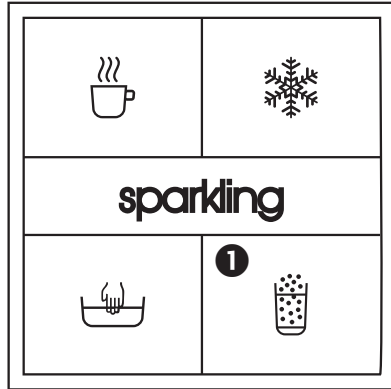

**QUATREAU TOUCH
HAND HOT AND COLD MAINS WATER**

HAND HOT MAINS WATER

To activate press once the bottom left control quadrant (sink icon) once. To turn off press anywhere on the keypad.

Note:

During commissioning it is possible to adjust the temperature to suit personal preference. Recommended set point is 104°F. To adjust turn the nut on the top of the thermostatic valve in a clockwise direction to make the water colder and counter-clockwise to make it hotter.

COLD MAINS COLD WATER

To activate touch the bottom left control quadrant (sink icon) twice. To turn off press anywhere on the keypad.

FLOW RATE

Flow rates are set at commissioning. The flow rate of both hand hot and cold mains water can be adjusted by closing the lever ball valves feeding the thermostatic valve.

CAUTION

**Maximum operating pressure 30 psi.
Do not open lever ball valves fully.
Excessive pressure and flow will cause damage.**



The Pure H2O Company Ltd, Unit 21 Boundary Business Centre, Boundary Lane,
Woking, Surrey GU21 5DH United Kingdom www.quatreauUSA.com

QT 09/19

Quatreau is a registered trademark of the Pure H2O Company Limited.
Copyright © 2019 The Pure H2O Company Limited. All rights reserved.