

Parts List		
ITEM#	DESCRIPTION	PART#
1	DRIVE COUPLING	10012
2	BEARING	10008
3	PUMP BODY	10004B
4	SEAL ASSEMBLY	10001
5	DRIVE SHAFT	
6	COUPLING	10003
7	TUBE	10002
8	ROTOR	
9	STATOR	
10	FOOT GUARD	10009

