

# **TUSKIN AGITATOR**

## ***Assembly Instructions***

- 1) Slide bung adaptor over the agitator shaft
- 2) Attach the agitator to the motor shaft
- 3) Using bolts provided (4) attach bung adaptor to the motor

## ***Operating Instructions***

- 1) Place the agitator in the drum opening
- 2) Hand-tighten the fitting
- 3) Plug the power cord into an 110 volt outlet
- 4) Adjust the potentiometer all the way to the right (full speed)

## ***Cleaning***

The agitator rod & props may be cleaned with mild detergents. DO NOT immerse the motor & drive units.

## ***Warranty & Factory Service***

Tuskin Equipment Corporation warrants its products against defects in materials and workmanship. If a failure results from such defects within 1 year of Customer delivery, Tuskin will, at its option, repair or replace the defective unit free of all charges except for special shipping charges (UPS ground is standard).

All in-warranty and service returns must be accompanied with a Tuskin Return Authorization. For questions or to obtain a Return Authorization, contact:

**Tuskin Equipment Corp.**  
**1-800-887-5461**