

# Parts List

ITEM#	DESCRIPTION	PART#
1	DRIVE COUPLING	10012
2	BEARING	10008
3	PUMP BODY	10004
4	SEAL ASSEMBLY	10001
5	DRIVE SHAFT	
6	ROTOR	
7	STATOR	
8	COUPLING ADAPTOR	10003

