

Installation Instructions for Predator Separator

NEVER DROP SEPARATOR – Care needs to be taken while handling separator so as to prevent damage or injury. Separator should always be secured while being moved and should never be dropped.

Placement in BHA

Above the TAC

The Predator Separator is designed to work above the TAC and in the vertical portion of the well.

It should not be installed in the lateral.

There should be a minimum of 30 feet between the Super Predator and the TAC.

If a strainer nipple will be installed under the pump a down hole sub must be used to completely encase strainer nipple & prevent contact between the strainer nipple & the separator.

Below the TAC

The Predator Separator is designed to work above the TAC and in the vertical portion of the well.

It should not be installed in the lateral.

If the separator needs to be installed below the TAC there should be a minimum of 6 joints of pipe (180 feet) between the Super Predator and the TAC.

If a strainer nipple will be installed under the pump a down hole sub must be used to completely encase strainer nipple & prevent contact between the strainer nipple & the separator.

If there are questions on the above installation instructions, please call Advanced Energy Solutions at 281-255-0400.

