


This instruction sheet applies to the Ballast Starter Base Replacement Kit PN 82-4018, available for the IBD Ballast Starter Base. To install the new base:

- A. Disconnect power.
- B. Disconnect lead from power supply contacts.
- C. Remove existing ballast starter base.
- D. Swab area with alcohol to allow good adhesion of adhesive tape.
- E. Remove backing strip from adhesive tape on the bottom of replacement ballast starter base and push onto studs. Press firmly into place.
- F. Reconnect leads.
- G. Reconnect power.

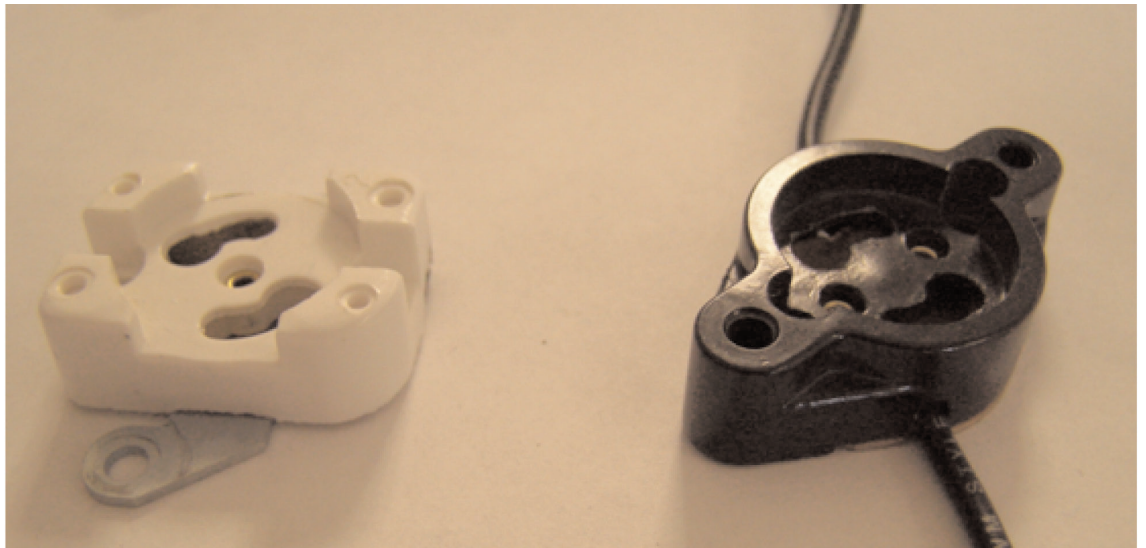

**CURRENT BASE**

**REPLACEMENT  
(Includes Integral Wires)**