

INSTRUCTION SHEET

BRACKET INSTALLATION

FLAVOR SELECT-16 (FS-16) DISPENSER

1. INSTALLATION INSTRUCTIONS

- 1.1 Remove merchandiser from the dispenser.
- 1.2 Disconnect power to dispenser.
- 1.3 Remove bin lid.
- 1.4 Remove all ice from the bin.

WARNING

THIS UNIT IS EQUIPPED WITH AUTOMATIC AGITATION. IT MAY ACTIVATE UNEXPECTEDLY. DO NOT PLACE HANDS, OR FOREIGN OBJECTS IN THE ICE STORAGE COMPARTMENT. WHEN UNIT IS BEING SERVICED, CLEANED, OR SANITIZED, UNPLUG DISPENSER FROM THE POWER SOURCE.

NOTE:

*All of the ice **MUST** be removed from the bin prior to installation of the bracket.*

- 1.5 Remove ring and pin from paddle wheel/agitator assembly.
- 1.6 Remove agitator bar from paddle wheel/drive motor shaft.
- 1.7 Remove the paddle wheel.
- 1.8 Install the bracket (see Figure 1) over the drive motor housing.
- 1.9 Install the shroud into the bracket assembly (see Figure 2). *Ensure that the bracket and shroud are placed all the way up against the front wall of the ice bin.*
- 1.10 Reinstall the paddle wheel, agitator bar and pin with two rings.
- 1.11 Refill the ice bin with ice and place back into operation.



Bracket Assembly
Figure 1



Shroud and Bracket Assembled
Figure 2

Please refer to the Lancer web site (www.lancercorp.com) for information relating to Lancer Installation and Service Manuals, Instruction Sheets, Technical Bulletins, Service Bulletins, etc.

LANCER

6655 LANCER BLVD. • SAN ANTONIO, TEXAS 78219 USA • (210) 310-7000

FAX SALES

- NORTH AMERICA – 210-310-7245 • INTERNATIONAL SALES – 210-310-7242 • CUSTOMER SERVICE – 210-310-7242 •
- LATIN AMERICA – 210-310-7245 • EUROPE – 32-2-755-2399 • PACIFIC – 61-8-8268-1978 •

FAX ENGINEERING: • 210-310-7096

"Lancer" is the registered trademark of Lancer • Copyright — 2004 by Lancer, all rights reserved.

DATE: 11/05/04
P.N.: 28-0579