

# **TOSHIBA**

## *Carrier*

### **SMART MANAGER / CENTRAL REMOTE CONTROL**

# **Owner's Manual**


---

Model name:

---

**BMS-SM1280HTLUL (SMART MANAGER)**

**BMS-CM1281TLUL (CENTRAL REMOTE CONTROL)**

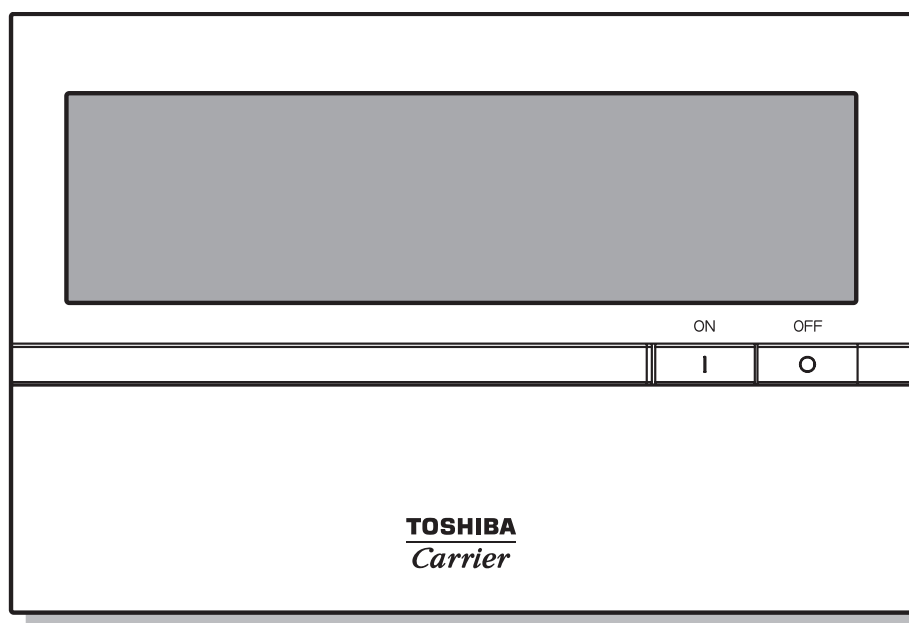

- 
- **Save These Instructions!**
-

Thank you very much for purchasing TOSHIBA / Carrier Smart Manager / Central Remote Control. This manual explains how to use the main unit of the Smart Manager and Central Remote Control. For the usage of the Smart Manager through the Web, refer to the specific Owner's Manual.



## Contents

---





<b>1</b>	<b>Precautions for Safety</b> .....	<b>3</b>
<b>2</b>	<b>Specification</b> .....	<b>4</b>
<b>3</b>	<b>System Configuration</b> .....	<b>5</b>
<b>4</b>	<b>Operating Instructions</b> .....	<b>6</b>
<b>5</b>	<b>Group Operation</b> .....	<b>10</b>
<b>6</b>	<b>Zone Operation and Simultaneous Operation</b> .....	<b>11</b>

# 1 Precautions for Safety




- Important information is described in the product itself and the manuals to prevent injury to the user and other persons, and damage to property, and for safe and correct use. Make sure to thoroughly understand the following details (descriptions and graphic symbols) before reading the text, and make sure to observe the precautions.
- Keep this Manual at accessible place for future reference.


Indication	Meaning of Indication
 <b>WARNING</b>	Text set off in this manner indicates that failure to adhere to the directions in the warning could result in serious bodily harm (*1) or loss of life if the product is handled improperly.
 <b>CAUTION</b>	Text set off in this manner indicates that failure to adhere to the directions in the caution could result in serious bodily injury (*2) or damage (*3) to property if the product is handled improperly.

- \*1: Serious bodily harm indicates loss of eyesight, injury, burns, electric shock, bone fracture, poisoning, and other injuries which leave aftereffect and require hospitalization or long-term treatment as an outpatient.
- \*2: Bodily injury indicates injury, burns, electric shock, and other injuries which do not require hospitalization or long-term treatment as an outpatient.
- \*3: Damage to property indicates damage extending to buildings, household effects, domestic livestock, and pets.

Symbols	Meaning of Symbols
	“  ” Indicates prohibited items. The actual contents of the prohibition are indicated by a picture or text placed inside or next to the graphic symbol.
	“  ” Indicates compulsory (mandatory) items. The actual contents of the obligation indicated by a picture or text placed inside or next to the graphic symbol.

EN

 <b>WARNING</b>	
	<ul style="list-style-type: none"> <li>• <b>Only a qualified installer or qualified service person is allowed to do installation work.</b> Installation requires specialized knowledge and skills. If installation is carried out by an unqualified individual, fire or electric shock may result.</li> <li>• <b>If an abnormality occurs (burning odour), stop operations, and turn off the circuit breaker. Otherwise, fire or electric shock may result. Consult your dealer to repair the product.</b></li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not disassemble, modify, repair or move the product yourself.</b> Doing so may cause fire, electric shock or injury. Ask a qualified installer or qualified service person to do any repairs or to move the product.</li> </ul>

 <b>CAUTION</b>	
	<ul style="list-style-type: none"> <li>• <b>Do not operate the buttons with wet hands.</b> Doing so may cause electric shock.</li> </ul>

**NOTE**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area, is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**FCC WARNING**

Change or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# 2 Specification

Using the Smart Manager / Central Remote Control, you can control up to 128 groups of air conditioners by line, zone or group; you can run / stop them and change their settings centrally. The Smart Manager / Central Remote Control also displays the status and settings of the air conditioners.


Line	Two lines, line 1 and line 2, can be connected to the Smart Manager / Central Remote Control to communicate with air conditioners. The Smart Manager / Central Remote Control can manage all air conditioners connected to the same line at once.
Zone	In the zone setting mode, you can make zones by grouping air conditioners. You can make up to 64 zones (zone 1 - zone 64). The Smart Manager / Central Remote Control can manage all air conditioners in a zone at once. (For setting zones, refer to the Installation Manual.)

Part name		Central Controller	Power Unit
Model name		BMS-SM1280HTLUL / BMS-CM1281TLUL	
Power supply		Use bundled power unit.	120 VAC, 60 Hz
Power consumption			6W (SM1280) / 4W (CM1281)
Connectable unit number	Indoor unit	Up to 128 units (Line1: Up to 64 units, Line2: Up to 64 units)	—
	Energy monitoring interface	Up to 4 units.	—
	Digital input / output interface	Up to 4 units	—
Operating temperature / humidity		32 to 104 °F (0 to 40 °C), 10 to 90 % RH (no condensation)	
Dimension		4.72" (H) x 7.09" (W) x 2.52" (D) inch (120 (H) x 180 (W) x 64 (D) mm)	4.49" (H) x 6.97" (W) x 1.97" (D) inch (114 (H) x 177 (W) x 50 (D) mm)
Mass		1.77 lb (0.8 kg)	1.99 lb (0.9 kg)


## External Dimensions

### Central Controller


Unit: inch (mm)

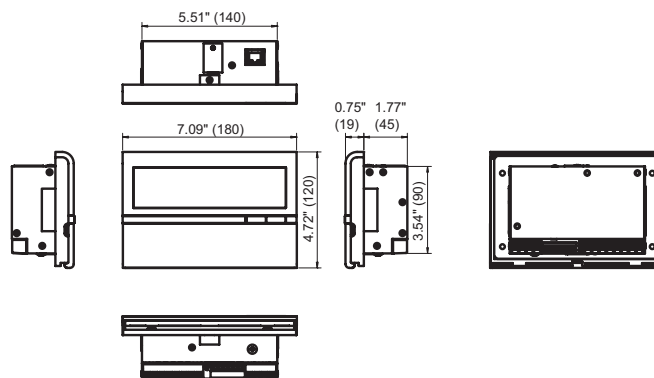

### Power Unit

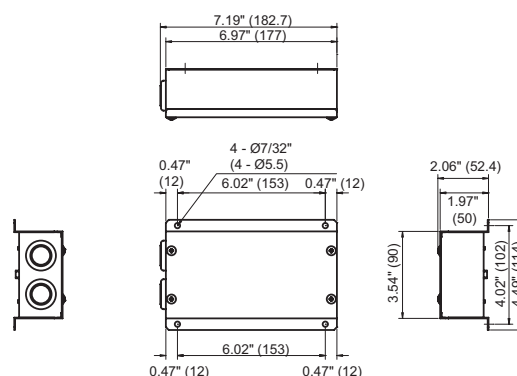

# 3 System Configuration

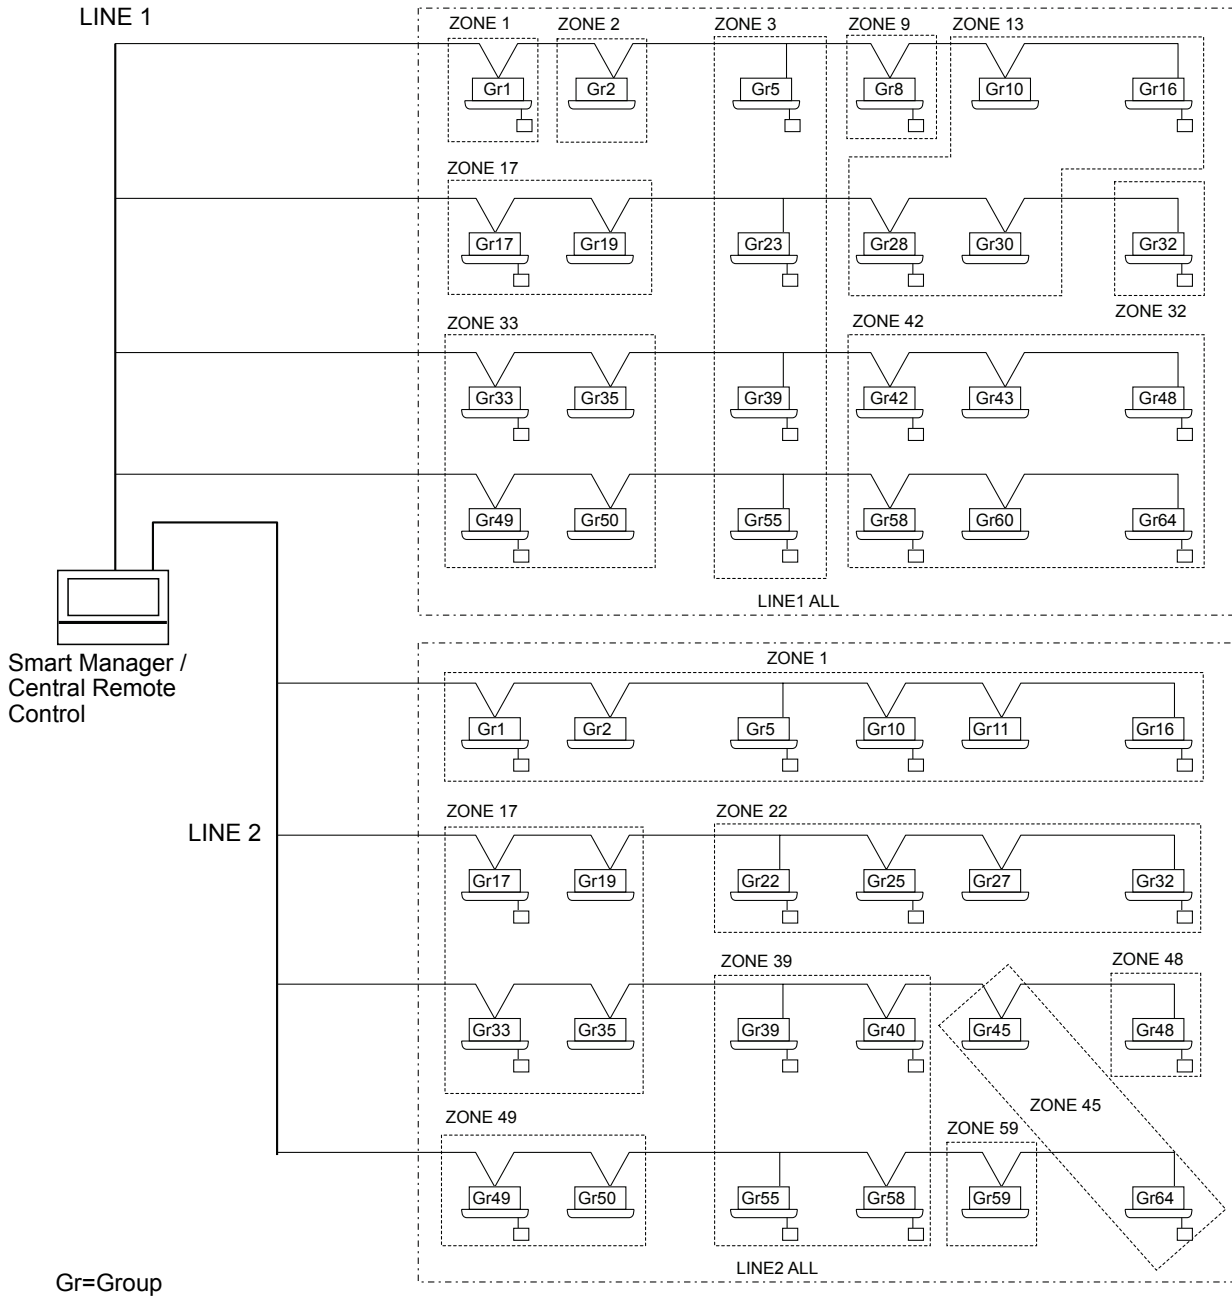

EN


\* Up to 64 zones and 64 groups per line can be managed.  
 (This Smart Manager / Central Remote Control controls 2 lines, 128 zones, and 128 groups in total.)


 








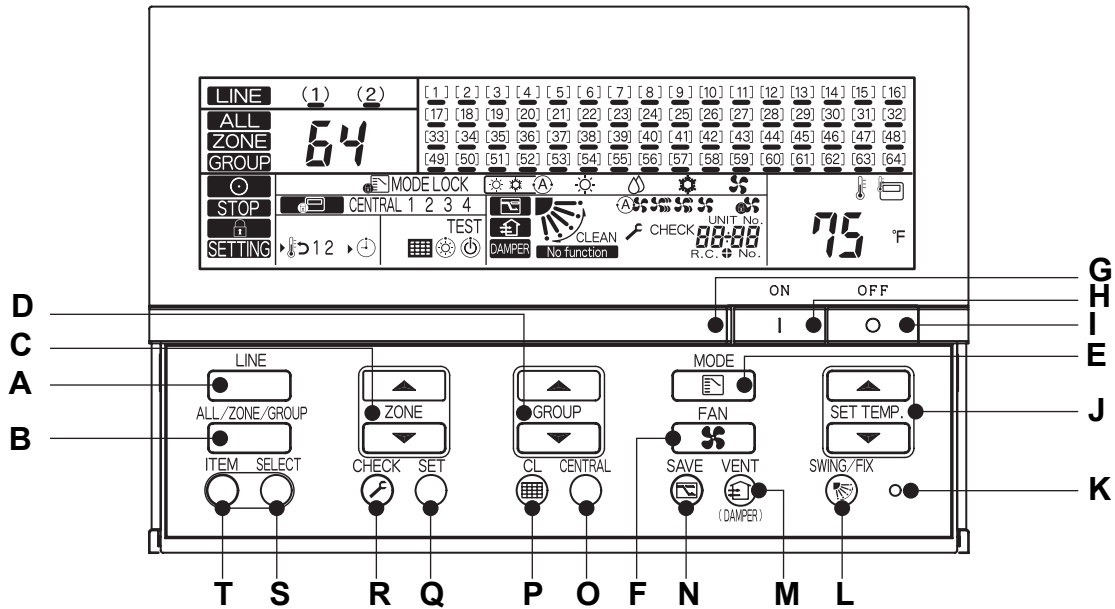






\* Groups that can be registered in each zone must meet the following conditions.  
 1. Groups are connected to the same line.  
 2. Groups are in the same group number range when the control group selection is used.

\* In the control group selection, the Smart Manager / Central Remote Control displays only for air conditioners in the set group number range. (For details, refer to the Installation Manual.)

# 4 Operating Instructions

## ■ Button operation



<b>A: LINE button</b> 	Switches line 1 (display 1), line 2 (display 2)
<b>B: ALL/ ZONE/ GROUP button</b> 	Switches ALL, ZONE, and GROUP. <b>ALL</b> : Selects all groups on the selected line simultaneously. <b>ZONE</b> : Selects all groups in the specified zone. <b>GROUP</b> : Selects a group. <ul style="list-style-type: none"> <li>Group 1 to 64 connected to the same line can configure zones.</li> <li>Groups connected to different lines cannot be specified for the same zone.</li> <li>This remote controller can control up to 2 lines, 128 zones, and 128 groups.</li> </ul>
<b>C: ZONE button</b> 	<ul style="list-style-type: none"> <li>▲: Increments the zone number.</li> <li>▼: Decrements the zone number.</li> </ul> * There are up to 64 zones per line. (128 groups in total).
<b>D: GROUP button</b> 	<ul style="list-style-type: none"> <li>▲: Increments the group number.</li> <li>▼: Decrements the group number.</li> </ul> * There are up to 64 groups per line. (128 groups in total).
<b>E: MODE button</b> 	Switches operation mode. (* Selectable operation modes vary depending on models.) AUTO:  Automatically switches heating operation and cooling operation alternately. HEAT:  Performs heating operation. DRY:  Performs dehumidifying operation. COOL:  Performs cooling operation. FAN:  Performs FAN operation. * When  MODE LOCK lights, operation mode is fixed to COOL or HEAT by the remote control system.
<b>F: FAN button</b> 	Switches air volume. (* Selectable air volume levels vary depending on models.) AUTO:  Air volume is automatically switched by the indoor unit. HEAT:  Large air volume (Fan speed: High) MED.:  Medium air volume (Fan speed: Medium) LOW:  Small air volume (Fan speed: Low) * While  is displayed, air volume is fixed and cannot be selected.


<b>G: Run lamp</b>		Indicates the operating status of the selected group. OFF: The selected group is not operating. ON: The selected group is operating. Flashing: When an error occurs or the protective device is activated
<b>H: ON button</b>		Starts operation.
<b>I: OFF button</b>		Stops operation.
<b>J: SET TEMP. button</b>		 Increases the set temperature.  Decreases the set temperature.
<b>K: RESET button</b>		Used to reset settings. (Do not usually use this button.)
<b>L: SWING/FIX button</b>		Switches the auto-swing mode and louver direction when no remote controller is used. * This button is disabled in the ALL or ZONE mode.
<b>M: VENT button</b>		Used when a commercially available ventilation fan is connected. Pressing this button runs or stops the connected ventilation fan. When operation of air conditioners is started or stopped, the ventilation fan is also started or stopped at the same time. (While the ventilation fan is running,  is displayed on the display.) * When <b>No function</b> appears on the display when the VENT button is pressed, no ventilation fan is connected. * This button is used to operate and stop the damper when a heat exchange ventilators is connected.
<b>N: SAVE button</b>		Drives the air conditioner into the power saving mode. * When <b>No function</b> appears on the display, the power saving mode is not available for the air conditioner.
<b>O: CENTRAL button</b>		Switches CENTRAL 1 to CENTRAL 4 in the central control mode. No indication: Central control is cleared (individual operation) * This button is disabled in the remote controller mode. Individual: Controls with the remote controller are possible. CENTRAL 1: Disables operation start / stop using the remote controller. CENTRAL 2: Disables operation start / stop, operation mode switching, and temperature setting using the remote controller. CENTRAL 3: Disables operation mode switching and temperature setting using the remote controller. CENTRAL 4: Disables operation mode switching using the remote controller.
<b>P: CL button</b>		Erases the filter mark on the display. This button is also used for the initial settings.
<b>Q: SET button</b>		Used for service or special operations. (Do not usually use these buttons.)
<b>R: CHECK button</b>		
<b>S: ITEM button</b>		Used for enable / disable settings for return-back operation* and timer operation. ITEM  : Selects an item to be set sequentially. (The selected item and the  mark light.)
<b>T: SELEC T button</b>		SELECT  : Enables or disables the selected item. * Selectable items may vary depending on models.

\* **[Return-back operation]**

The return-back operation is a function to return the temperature automatically to the set temperature in a predetermined time period if a temperature lower than the specified temperature (for cooling) or higher than the specified temperature (for heating) is set on the remote controller. (For details, refer to the Installation Manual.)




 
 


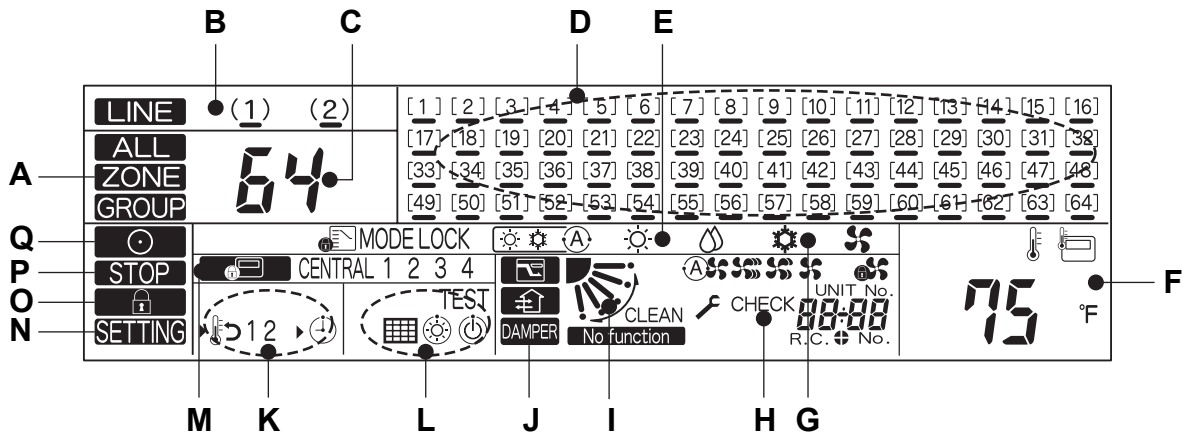




 
 

 
 




 

\* For the details of power saving mode, refer to the Owner's Manual of the air conditioner.

## ■ Indications on the LCD panel




<b>A: ALL/ZONE/GROUP</b>	<b>ALL</b> , <b>ZONE</b> , or <b>GROUP</b> is displayed.
<b>B: Line number</b>	<p><b>LINE</b> (1) ← When a line is selected, the ( ) mark of the selected line number flashes.</p> <p>← The number lights up when any controllable unit is detected on the line.</p> <p><b>LINE</b> (1) (2) ← When both line 1 and line 2 are selected, the line of the flashing ( ) mark is displayed.</p> <p>← The underline lights when there is at least one operating air conditioner on the line.</p> <p>← The underline flashes when an alarm occurs.</p>
<b>C: Zone number</b>	<p>The selected line number, zone number or group number is displayed.</p> <p><b>ALL</b> 1.2</p> <p><b>ZONE</b> 1~64</p> <p><b>GROUP</b> 1~64</p>
<b>D: Group number</b>	<p>Connected groups are automatically recognized and displayed.</p> <p>When a group is specified with the <b>GROUP</b>   button, it is displayed like  [ ] .</p> <p> [ ]  Flashing: Shows the group whose settings are displayed on the panel.</p> <p>[ ] Lighting: Shows selected groups.</p> <p><u>3</u> Underline: Shows that the group is operating.</p> <p><u>3</u> The underline flashes when an alarm occurs.</p>
<b>E: Operation mode</b>	<p>The current operation mode is displayed.</p> <p>AUTO:    HEAT:  DRY:  COOL:  FAN: </p> <p>* When  lights when the  button is pressed, switching of HEAT and COOL operation mode is disabled.</p>
<b>F: Temperature</b>	The set temperature is displayed.
<b>G: Air volume</b>	One of AUTO   , HEAT  , MED.  , LOW  , or FIXED  is displayed.



<b>H: Check code</b>	When the selected air conditioner is abnormal, its unit number and the check code are displayed.
<b>I: Louver position / swing</b>	Louver position or louver swinging is displayed. (When no remote controller is used.)
<b>J: Functions (1)</b>	 : Lights when the power saving mode is activated.  : Lights when a ventilation fan is running.  : Lights when the  or  button is pressed though the function is not provided.
<b>K: Functions (2)</b>	 : Displayed when functions of return-back operation enabled activated.  :  :
<b>L: Functions (3)</b>	 : Indicates that filters should be replaced. <b>TEST</b> : Indicates that a test run is being executed.  : Displayed when the air conditioner cannot operate with the selected operation mode (when heating and cooling modes are mixed in the multi- indoor unit control system).  : Displayed at the beginning of heating operation or during defrosting operation. While this mark is displayed, the indoor fan stops.
<b>M: Central control</b>	<b>CENTRAL 1 2 3 4</b> : The selected operation prohibited setting (CENTRAL 1, 2, 3, or 4) is displayed in the central control mode.  : Displayed when the central control system is controlling. When the  ,  ,  , or <b>SET TEMP.</b>   button is pressed with remote controller operation disabled by the central control system,  flashes and no setting change is accepted.
<b>N: SETTING</b>	Flashes for several minutes when the power switch is turned on. While this mark is flashing, no setting is enabled because the Smart Manager / Central Remote Control is recognizing connected groups.
<b>O:</b>  ("Controller Prohibition" mark)	Lights while the controller prohibition function is activated. (While this mark is lighting, no operation is enabled.) * Pressing the  ,  , and  buttons simultaneously switches controller prohibition ON/OFF.
<b>P:</b> <b>STOP</b>	Lights in the emergency stop state due to an alarm signal input.
<b>Q:</b>  ("Operating" mark)	Lights when at least one controlled air conditioner is operating. Flashes when at least one air conditioner is abnormal or the protective device is activated.

# 5 Group Operation

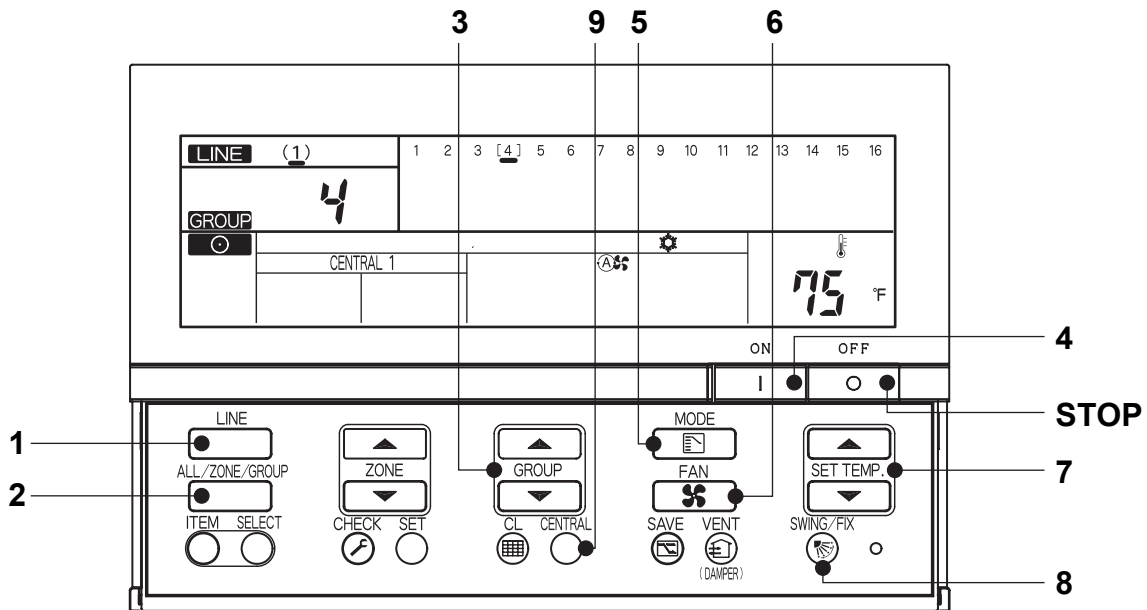


(Example) Operating LINE 1, GROUP 4 (Cooling at 75°F, air volume: AUTO)

 
 
 

 

 

 
<b>Power on</b>	Turn on the power of the remote controller. (Buttons on the remote controller are disabled while <b>SETTING</b> is displayed, but this is not a fault.)
<b>1 Line switching</b>	Select line 1 with the  button.
<b>2 ALL/ZONE/GROUP</b>	<b>GROUP</b> Select <b>GROUP</b> with the  button.
<b>3 Group switching</b>	Select group number 4 with the GROUP  and  buttons. (Group number 4 blinks like .)
<b>4 ON</b>	Press the ON button to start operation.
<b>5 Operation mode switching</b>	Select COOL mode with the  button.
<b>6 Air volume switching</b>	Select AUTO air volume with the  button.
<b>7 Temperature setting</b>	75°F Set temperature to 75°F with the SET TEMP.  and  buttons.
<b>8 Swing / wind direction setting (When no remote controller is used)</b>	Select a louver position or up / down swinging with the  button.
<b>9 Central / individual (Only in the central control mode)</b>	Change the setting with the  button. Individual: Controls with the remote controller are possible. CENTRAL 1: Disables operation start / stop using the remote controller. CENTRAL 2: Disables operation start / stop, operation mode switching, and temperature setting using the remote controller. CENTRAL 3: Disables operation mode switching and temperature setting using the remote controller. CENTRAL 4: Disables operation mode switching using the remote controller.  “CENTRAL” is displayed for central or individual control other than above.
<b>STOP</b>	Press the OFF button to stop operation.

\* Indications on the LCD of the Smart Manager / Central Remote Control remain unchanged even when operation is stopped.

# 6 Zone Operation and Simultaneous Operation

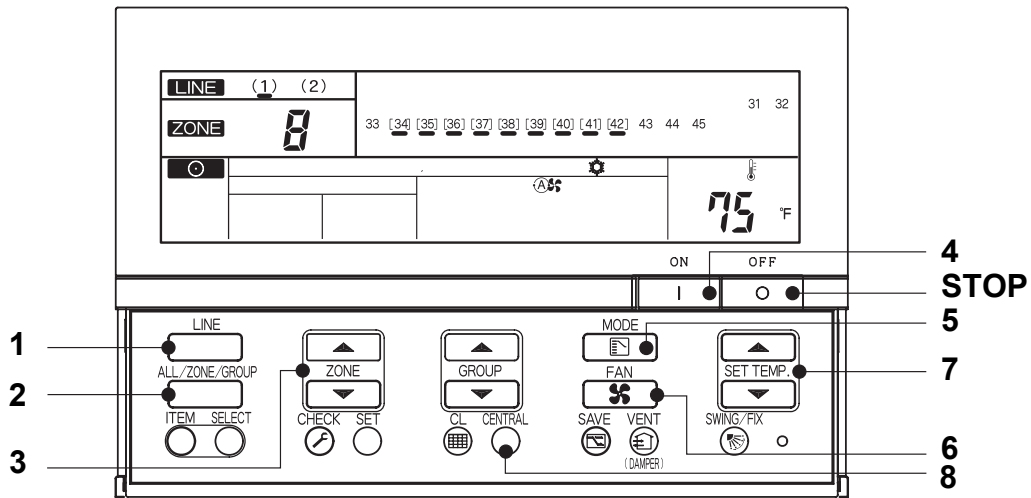

(Example) Performing zone operation (LINE 1, ZONE 8, GROUP 34~42 cooling at 75°F, air volume: AUTO) and simultaneous operation (LINE 1, cooling at 75°F, air volume: AUTO)

	Zone operation (LINE 1, ZONE 8, cooling at 75°F, air volume: AUTO)	Simultaneous operation (LINE 1, cooling at 75°F, air volume: AUTO)
<b>Power on</b>	Turn on the power of the remote controller (Buttons on the remote controller are disabled while <b>SETTING</b> is displayed, but this is not a fault.)	
<b>1 Line switching</b>	Select line 1 with the <b>LINE</b> button.  (1)	
<b>2 ALL/ZONE/GROUP</b>	Select <b>ZONE</b> with the <b>ALL/ZONE/GROUP</b> button.	Select <b>ALL</b> with the <b>ALL/ZONE/GROUP</b> button.
<b>3 Zone switching</b>	Select 8 ZONE with the ZONE  and  buttons. ("8" is displayed.)	(Not necessary) ("1" is displayed.)
<b>4 ON</b>	Press the <b>ON</b> button to start operation. (Operation starts one group after another at about one-second interval.)	
<b>5 Operation mode switching</b>	Select COOL mode with the <b>MODE</b> button.  	
<b>6 Air volume switching</b>	Select AUTO air volume with the <b>FAN</b> button.  	
<b>7 Temperature setting</b>	75°F Set temperature to 75°F with the SET TEMP.  and  buttons.	
<b>8 Central / individual (Only in the central control mode)</b>	Change the setting with the <b>CENTRAL</b> button. Individual: Controls with the remote controller are possible. CENTRAL 1: Disables operation start / stop using the remote controller. CENTRAL 2: Disables operation start / stop, operation mode switching, and temperature setting using the remote controller. CENTRAL 3: Disables operation mode switching and temperature setting using the remote controller. CENTRAL 4: Disables operation mode switching using the remote controller. "CENTRAL" is displayed for central or individual control other than above.	
<b>STOP</b>	Press the <b>OFF</b> button to stop operation.	

- \* When **ALL** or **ZONE** is displayed, the **SWING/FIX** button is disabled.
- \* Settings when ALL or ZONE is selected: Only the contents that are set in the ALL or ZONE mode are set in each air conditioner.  
 (Example) When the **MODE** button is pressed in the ALL or ZONE mode, only the operation mode is set in each air conditioner.
- \* Indications on the LCD of the Smart Manager / Central Remote Control remain unchanged even when operation is stopped.

EN

**TOSHIBA CARRIER CORPORATION**  
336 TADEHARA, FUJI-SHI, SHIZUOKA-KEN 416-8521 JAPAN

DE93929001