

We hope you enjoy your purchase of the Stealth NX-2 Drone and use this Quick Guide to get your drone to take off! If you are new to flying drones we suggest reading the full User Manual, included in your package before getting started.

Battery Notes: The Remote Controller does not come with batteries. Please use 4 AAA batteries in the remote controller. The battery in the drone will be partially charged out of the box.



Pair Your Drone & Automatic Take Off

Please Note: Before every flight, the drone will have to be paired to the Remote Controller.

Step 1 Place your drone on a flat surface with a few feet of cleared space in front of it. Press the Power Button on the top surface of the drone first and then flick the remote controller power ON. The drone and controller's lights will begin blinking.

Step 2 Move the left throttle stick on the controller UP then DOWN. The remote controller will beep a few times and the drone's lights will stop blinking, ensuring the drone has been paired.

Step 3 Press the Auto Take Off button. Your drone will drift forward and take off. Immediately use the left throttle stick to increase the altitude for your drone to fly.

If you have any issues, contact us before returning your product to the dealer/store. We will be glad to help you in any way possible. Tel. 786-520-4145

Fly Your Drone



Ascending: Ease the left throttle stick upwards to make the Stealth NX-2 go higher in altitude.



Descending: Ease the left throttle stick downwards to lower the Stealth NX-2.




Forward Backward: Ease the right directional stick up and down to make the Stealth NX-2 go forward and backward.



Rotate: Push the left throttle stick left or right and the Stealth NX-2 will turn in that specific direction.



Strafing: Push the right directional stick to the left or right and the Stealth NX-2 will move in that side-to-side direction.

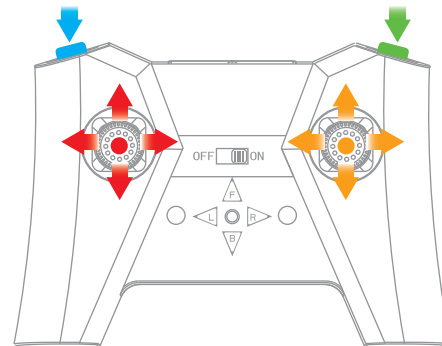

360° Flip: While hovering in mid-air press the top right button and the remote will beep. Immediately use the right throttle stick to determine the direction of the flip and the drone will subsequently flip in that direction.



Ignition/ Auto Landing: Press the top left button, the remote will beep and the drone will safely and slowly land. Initially, this button will ignite the blades. Once in flight, the button will enact Auto Landing.



Check out our YouTube channel for instructional videos and more! [YouTube](#) /OdysseyToys