

- Preparing and cooking with Golden eggs should only be performed under adult supervision.

1

Familiarize yourself with the Golden Goose prior to making any attempts at scrambling an egg. Learn to spin it empty, 'break in' the new cords, and open and close it a few times... When you feel confident in your ability to power the Goose, and have reviewed the instructions thoroughly, move on to step two!



2

Inspect your eggs for damage or cracks. Do not use cracked or damaged eggs! Place an egg in the cradle, and orient it according to the egg shape.

- Goose recommends using pasteurized eggs.

Getting started

3

Slide the ring in place, and turn clockwise until it locks!

- **Push & Turn Ring Only.**
Locking and Unlocking the Ring is like opening a child-proof pill bottle...

- Align the two halves to the keyed features on either side of the egg cradle.

Warning! The Cradle must be aligned properly!

• Alignment keys





• You can use the Goose in a horizontal, diagonal, or vertical orientation depending on your egg and technique!

4

Grasp the handles and swing the Goose cradle in one direction until the cords are tightly wound and it pulls your handles inward.

5

Pull outwardly with an abrupt tug, and let the Goose spin back...**Catch that Spin!** When the spin returns, pull out again. Let your grip move in with the twist, and pull out with each cycle to build momentum and force!



6


Technique

As you pick up speed, you'll notice the center of gravity aligning for efficiency. Now is the time to get more aggressive and scramble the egg! You may hear it mix with a distinct 'Quaaaak' sound.


7

All eggs are different, and some require more or less force. Really fresh eggs can be a nice little workout!

• **Be careful when opening the Goose!** It is a powerful tool, and a weak or cracked egg could break inside the cradle from the forces applied...This is also a good reason to follow the instructions and maintain the proper **Insert Alignment!**

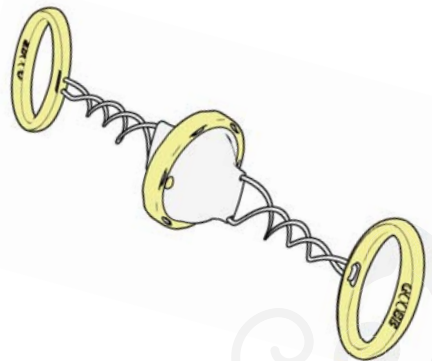

- Remember to be sure the ring is properly locked in place!

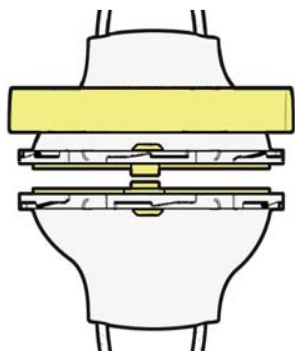


- Maintain the proper alignment of the Cradle halves!




Troubleshooting

- Trouble 'getting your spin on' can be due to misaligned cords.

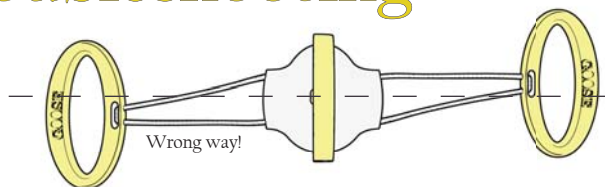


- New cords must be 'broken in' prior to mixing an egg.

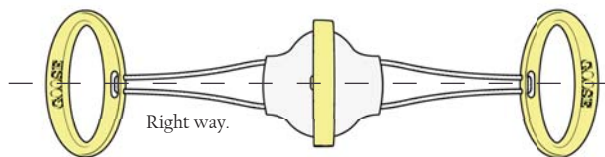

- The two halves must compress in order to unlock the cradle and remove the ring...
- Apply even pressure, or press down against a counter top if you find it difficult to unlock the ring.

- Shine a light through your egg to know for sure that it is scrambled!

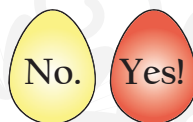

You'll know by the Glow!

Watch 'how to' videos at www.GooseGadgets.com

USER/PRODUCT GUIDE DISCLAIMER:

The Kitchen Goose product (the “Product”) is designed and intended only for aiding in cooking by Adults in Home Settings. The person or entity buying the Product and/or using the Product, even if different from such buyer, (the “User”) shall use the Product only for such purposes.

The User must ensure, and is solely responsible for ensuring, the proper and safe use of the Product. Use of the Product is at the sole risk and discretion of the User. The User acknowledges that cooking and eating uncooked and/or improperly cooked eggs is dangerous and may cause personal injury or death.

Information has been carefully checked and is believed to be accurate; however, no responsibility is assumed for inaccuracies.

Y Line Product Design, LLC dba: ‘Goose’ (“Company”) reserves the right to make changes without further notice to any products to improve reliability, function, or design.

COMPANY DOES NOT RECOMMEND THE USE OF THE PRODUCT WITH UNPASTEURIZED EGGS OR NOT FULLY OR PROPERLY COOKING EGGS BECAUSE SUCH USE MAY THREATEN LIFE OR CAUSE INJURY. PERSONS WITH FOOD ALLERGIES SHOULD NOT USE THIS PRODUCT.

THE PRODUCT IS SOLD ON AN AS IS, WHERE AS, AND WITH ALL FAULTS BASIS, AND COMPANY HEREBY DISCLAIMS ALL OTHER WARRANTIES, WHETHER WRITTEN OR ORAL, EXPRESS OR IMPLIED BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL COMPANY BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, SPECIAL OR INDIRECT DAMAGES IN CONNECTION WITH THE PRODUCT.

THE USER, FOR HIMSELF/HERSELF/ITSELF AND HIS/HER/ITS, PERSONAL REPRESENTATIVES, SUCCESSORS, AND ASSIGNS, HEREBY RELEASES, DISCHARGES, INDEMNIFIES, DEFENDS, PROTECTS AND HOLDS COMPANY AND ITS AGENTS, EMPLOYEES, OFFICERS, MANAGERS, MEMBERS, SUBSIDIARIES, PARENTS, SUCCESSORS, AND ASSIGNS (THE “COMPANY PARTY(IES)”) HARMLESS FOR, FROM AND AGAINST ANY AND ALL CLAIMS, CAUSES OF ACTION, DAMAGES, INJURIES, LOSSES, EXPENSES, ATTORNEYS’ FEES, AND HARM OF ANY KIND, WHETHER OR NOT FORESEEABLE, DIRECTLY OR INDIRECTLY RELATING IN WHOLE OR PART TO THE USE OF THIS PRODUCT, REGARDLESS OF THE ACTS OR OMISSIONS, WHETHER NEGLIGENTLY OR OTHERWISE OCCURRING, OF ANY COMPANY’S PARTY. EACH COMPANY’S PARTY WILL NOT BE LIABLE FOR, AND THE USER HEREBY WAIVES ANY RIGHT TO SEEK AGAINST ANY OF COMPANY’S PARTY, ANY CONSEQUENTIAL, INDIRECT, SPECIAL, STATUTORY, EXEMPLARY, PUNITIVE, OR INCIDENTAL DAMAGES CAUSED BY THE USE OF THIS PRODUCT, AND THE LIABILITY OF THE COMPANY PARTIES IN THE AGGREGATE WILL BE LIMITED TO THE PURCHASE PRICE OF THIS PRODUCT.

Use of this Product constitutes the User’s acknowledgement that the User has read and understands the warnings, cautions, terms and conditions in this Disclaimer and that the User agrees and consents to the terms and conditions of this Disclaimer; OTHERWISE DO NOT USE THIS PRODUCT.