


# RETHINK THE OUTDOOR KITCHEN CONCEPT



## CREATE AN LOC OUTDOOR KITCHEN

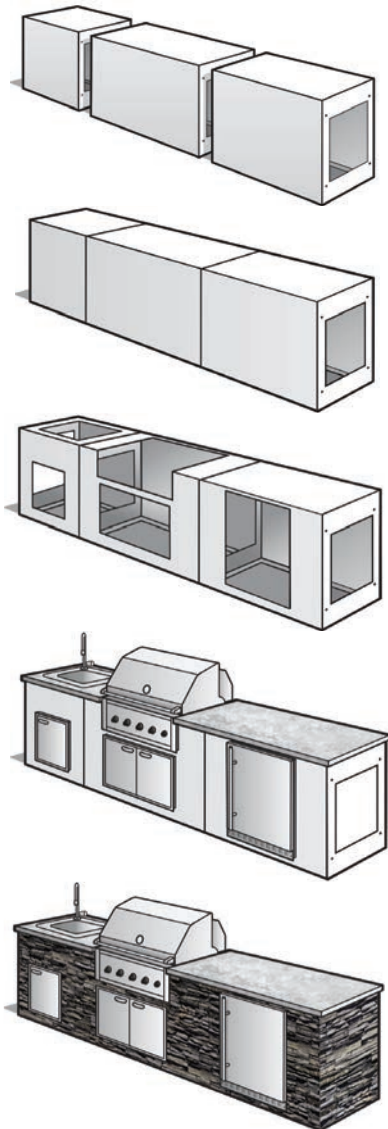

1

### PRE-PLANNING & DESIGN

- Determine location of LOC Units.
- Minimum 4" concrete or paver foundation installed.
- Specify appliances, countertops and surround material.
- Install necessary utilities.

2

### SECURE LOC UNITS

- Set LOC Units in designated area.
- Level, glue, and bolt LOC Units.

3

### CUT APPLIANCE OPENINGS

- Follow appliance manufacturers cut-out instructions.
- Cut LOC Units with a 4" or 7" diamond masonry blade.
- Install doors and drawers in advance of stone installation.

4

### INSTALL COUNTERTOP & APPLIANCES

- Install an outdoor countertop surface such as tile or granite. If selecting a solid surface such as granite, it is recommended you work with a local fabricator.
- Follow appliance manufacturers installation instructions.

5

### APPLY FINISHING MATERIALS

- Install material directly to the pre-scratched LOC Units.