


PLEASE NOTE:

- 1) FOR SAFE OPERATION AND CONTINUED HIGH PERFORMANCE FROM THIS EQUIPMENT, INSPECTION AND MAINTENANCE MUST BE PERFORMED BEFORE EACH USE
- 2) USE OF THIS EQUIPMENT OTHER THAN INTENDED, MAY BE HAZARDOUS.
- 3) ALTERATION OR MODIFICATION OF EQUIPMENT MAY BE HAZARDOUS. FOR REPAIR OR REPLACEMENT, PLEASE CALL YOUR DEALER

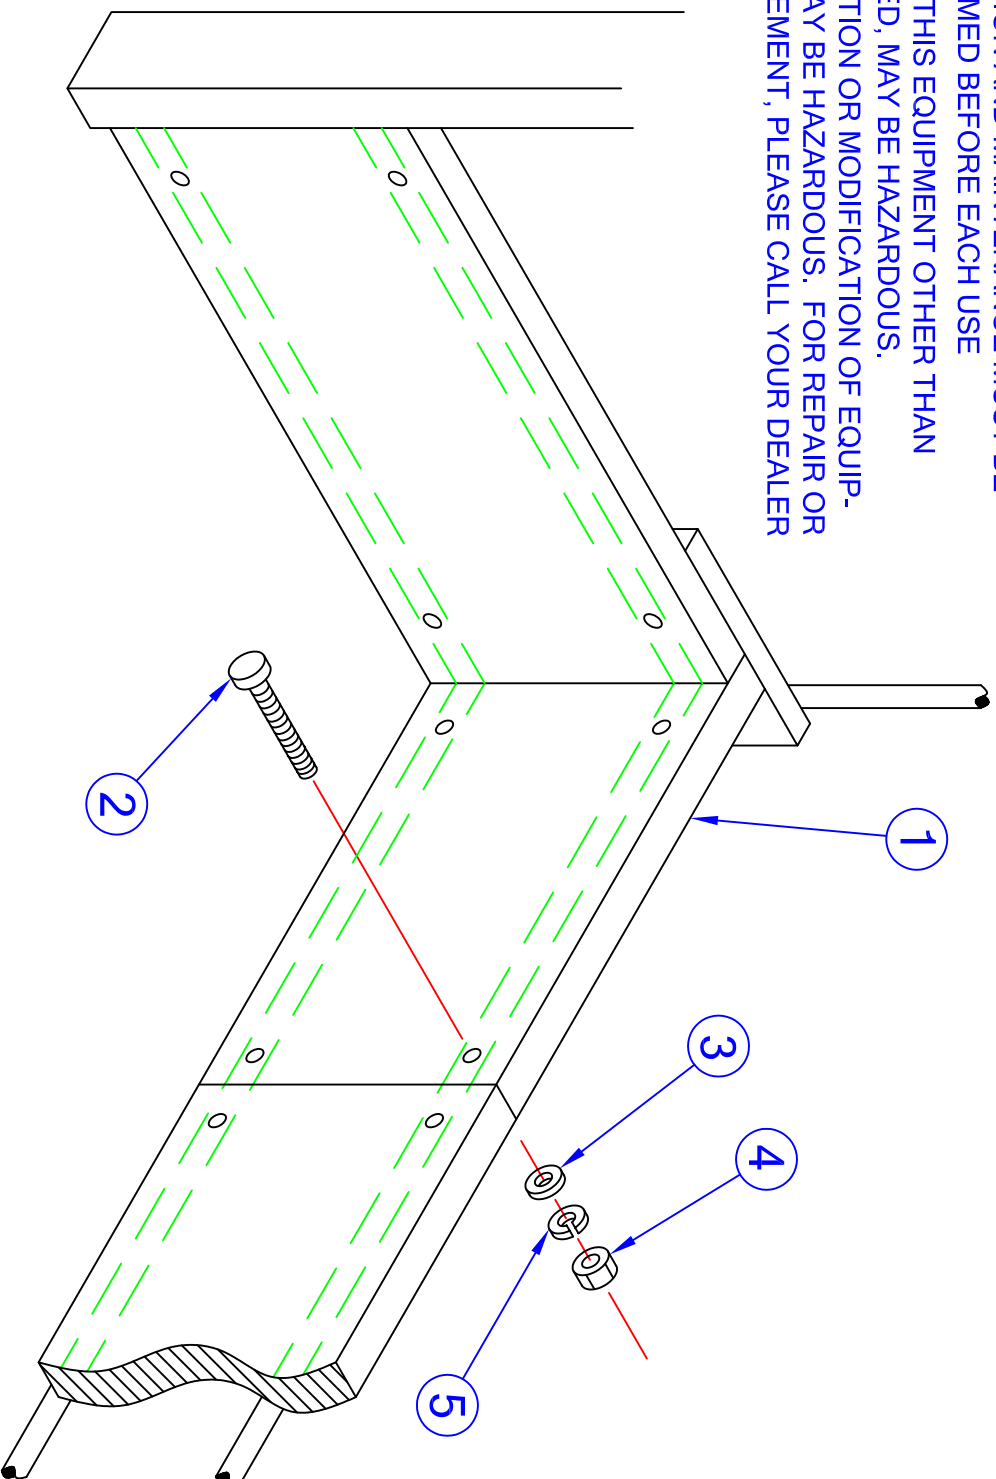

IMPORTANT

ADAPTING BOTTOM BOARDS TO EXISTING GOALS MAY REQUIRE FIELD MODIFICATIONS. REAR FRAMEWORK OF GOALS MAY BE DRILLED (3/8" DIA.) TO ACCEPT PRE-DRILLED BOARDS AND SUPPLIED FASTENERS.

Jaypro Sports

976 Hartford Turnpike
Waterford, CT 06385 USA
(800)243-0533
(800)988-3363 Fax
www.jaypro.com

MODEL NO.:
FHG-16

PRODUCT NAME:

FIELD HOCKEY BOTTOM BOARDS

DRAWN BY: JAC

EFFECTIVE DATE:
4-10-03

JAYPRO SPORTS
FIELD HOCKEY BOTTOM BOARDS, FHG-16
LIST OF MATERIALS

<u>PIECE NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
1	FHG164	BOTTOM BOARD	10
2	HB5008	5/16"-18 CARRIAGE BOLT	40
3	HW2049	5/16" FLAT WASHER	40
4	HN260	5/16"-18 HEX NUT	40
5	HW328	5/16" LOCK WASHER	40

TOOLS REQUIRED:

- 1- 1/2" OPEN END WRENCH OR ADJUSTABLE WRENCH

REFER TO SEPARATE INSTRUCTIONS FOR DETAILS ON FRAME ASSEMBLY.

- 1) WHEN BOTTOM BOARDS ARE ASSEMBLED WITH FRAME, ASSEMBLE THREE BOTTOM BOARDS (1) TO REAR CROSSBAR ASSEMBLY USING CARRIAGE BOLTS 5/16"-18 x 2 1/4" (2), FLAT WASHERS 5/16" (3), LOCK WASHERS 5/16" (5) AND HEX NUTS 5/16"-18 (4). THEN POSITION THE REAR CROSSBAR ASSEMBLY BETWEEN THE SIDE FRAMES AND MAKE THE FINAL ASSEMBLY.
- 2) ASSEMBLE BOTTOM BOARDS ONTO THE SIDE FRAME RAILS AS SHOWN ON THE ILLUSTRATION.