


- PLEASE NOTE:
- 1) FOR SAFE OPERATION AND CONTINUED HIGH PERFORMANCE FROM THIS EQUIPMENT, INSPECTION AND MAINTENANCE MUST BE PERFORMED BEFORE EACH USE
  - 2) USE OF THIS EQUIPMENT OTHER THAN INTENDED, MAY BE HAZARDOUS.
  - 3) ALTERATION OR MODIFICATION OF EQUIPMENT MAY BE HAZARDOUS. FOR REPAIR OR REPLACEMENT, PLEASE CALL YOUR DEALER

**TOP VIEW OF CONNECTION**

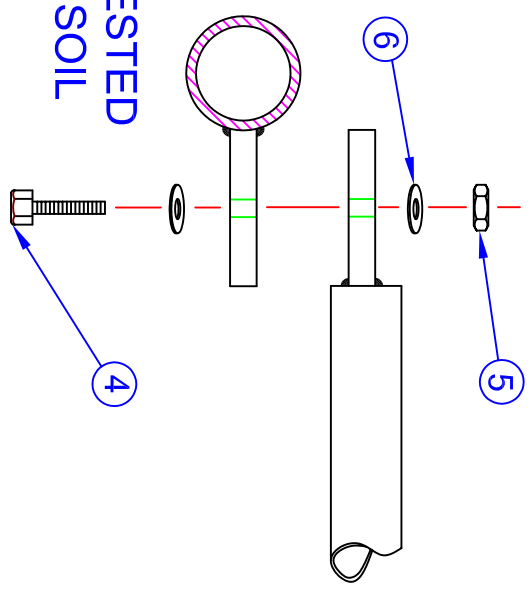

THESE ARE MINIMUM SUGGESTED DIMENSIONS FOR AVERAGE SOIL CONDITIONS.

**Jaypro Sports**  
 976 Hartford Turnpike  
 Waterford, CT 06385 USA  
 (800)243-0533  
 (800)988-3363 Fax  
 www.jaypro.com

MODEL NO.: **HF-GP-3**  
 PRODUCT NAME: **OFFICIAL FOOTBALL GOAL POSTS**  
 DRAWN BY: JAC  
 EFFECTIVE DATE: 4-21-03

# JAYPRO SPORTS

## H-FRAME FOOTBALL GOAL POST, HFGP-3 LIST OF MATERIALS

<u>PIECE NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
1	HFGP-3US	UPRIGHT	4
2	HFGP-3XS	CROSSBAR	2
3	EC0013	PVC CAP	4
4	HS2884	HEX HEAD SCREW ½"-13 x 1 ½"	8
5	HN268	HEX NUT ½"-13	8
6	HW2044	FLAT WASHER ½"-13	16

### LIST OF SUGGESTED MATERIALS

- 1) FOUR (8 FT), TWO BY FOUR INCH PIECES OF LUMBER MAY STEADY UPRIGHTS IN POSITION. ADDED GRAVEL (AFTER UPRIGHT IS IN PLACE) MAY ALSO HELP WITH BRACING.
- 2) MOISTURE RETAINER. SEE #8 ON ASSEMBLY INSTRUCTIONS.

TOOLS REQUIRED: STANDARD SHOVEL OR MECHANICAL DIGGING EQUIPMENT  
A LEVELING DEVICE  
(2) 9/16" SOCKETS WITH DRIVERS AND/OR 9/16" OPEN-END WRENCHES  
CONCRETE MIX, ASK DEALER FOR SPECIFICATIONS

### SAFE USE AND HANDLING

DO NOT HANG FROM CROSSBAR OR CLIMB ON THIS UNIT. THIS IS DANGEROUS AND THE ADDED WEIGHT MAY DAMAGE THE EQUIPMENT.

### CRITICAL REFERENCE DIMENSIONS

- 1) FROM GROUND LEVEL TO TOP OF CROSSBAR IS 10'-0".
- 2) DEPTH OF FOOTING HOLE IS 5 FEET. CONCRETE MIX TO EQUAL 4000 PSI.
- 3) TOP OF CONCRETE FOOTING IS RECESSED 8" BELOW GROUND SURFACE.

### ASSEMBLY INSTRUCTIONS

NOTE: WE RECOMMEND TWO PEOPLE ASSEMBLE THIS UNIT.

- 1) LAY OUT AND MARK DIMENSIONS FOR EXACT PLACEMENT OF UPRIGHTS. SEE DRAWING INCLUDED FOR ILLUSTRATION AND OFFICIAL DIMENSIONS.
- 2) IMPORTANT STEP: PLACE PVC CAPS ON TOP OF UPRIGHTS. SEE DRAWING INCLUDED.

- 3) DIG TWO UPRIGHT FOOTING HOLES PER RECOMMENDED DIMENSIONS. NOTE CRITICAL DIMENSION BETWEEN UPRIGHTS. SEE DRAWING INCLUDED.
- 4) STAND UPRIGHTS IN FOOTING HOLES, LEVEL AND BRACE THEM UTILIZING THE LIST OF SUGGESTED MATERIALS PROVIDED OR LEVEL AND BRACE UPRIGHTS WITH YOUR PERSONAL IDEAS AND MATERIALS AVAILABLE.
- 5) ASSEMBLE CROSSBAR ONTO UPRIGHTS WITH THE HARDWARE PROVIDED. SEE DRAWING INCLUDED.
- 6) CHECK UPRIGHTS AGAIN TO ACHIEVE PROPER LEVELING.
- 7) MEASURE AND MIX CONCRETE ACCORDING TO THE DEALER'S SPECIFICATIONS. SEE THE ENCLOSED POURED CONCRETE TABLE FOR USEFUL INFORMATION.
- 8) FINALLY, POUR CONCRETE LEAVING APPROXIMATELY 8" BETWEEN GROUND SURFACE AND THE CONCRETE. COVER THE NEW CONCRETE FOOTING (TO ALLOW FOR MAXIMUM CURING STRENGTH) WITH ANY OF THE FOLLOWING: PLASTIC, BURLAP CLOTH, HAY, OR ANY AVAILABLE MATERIAL THAT WILL KEEP THE SUN FROM DRYING THE CONCRETE.