



STEP 1: PRESS THE RUBBER STRIP INTO THE CHANNEL ON THE REAR CROSS-BAR.

FULL GRID CONFIG

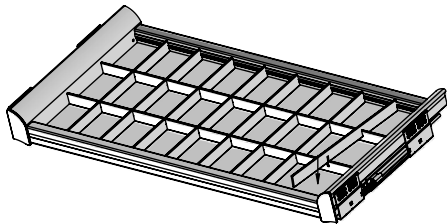

STEP 2A: LAY THE TWO LONGER GRID LENGTHS DOWN FIRST, THEN ADD THE SHORTER GRID LENGTHS BY INSERTING FROM THE REAR FORWARD.

CUSTOM GRID CONFIG

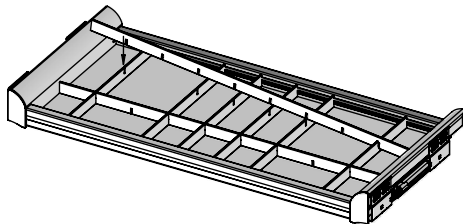

STEP 2B: INSERT THE DESIRED NUMBER OF SHORT GRID LENGTHS FIRST, THEN ADD THE TWO LONGER LENGTHS WITH THE SLOTS FACING DOWN.

View How To Videos for more information.
<https://www.youtube.com/user/TagHardware>