



## INSTALLING VALET


**STEP 1: PULL ROD OUT FROM BACK**



**STEP 2: MOUNT VALET TO PANEL**


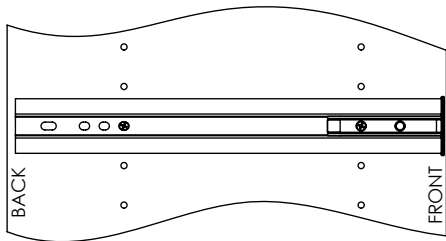


**STEP 3: PUSH ROD INTO FRONT**



## REPOSITIONING VALET

**STEP 1: REMOVE SCREW FROM REAR OF ROD**

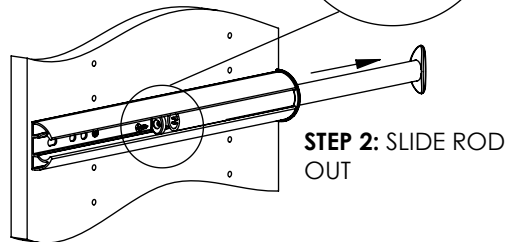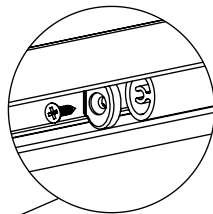

**STEP 2: SLIDE ROD OUT**