


TEMPLATE OF 7100 / F7100 RIM DEVICE (1:1)

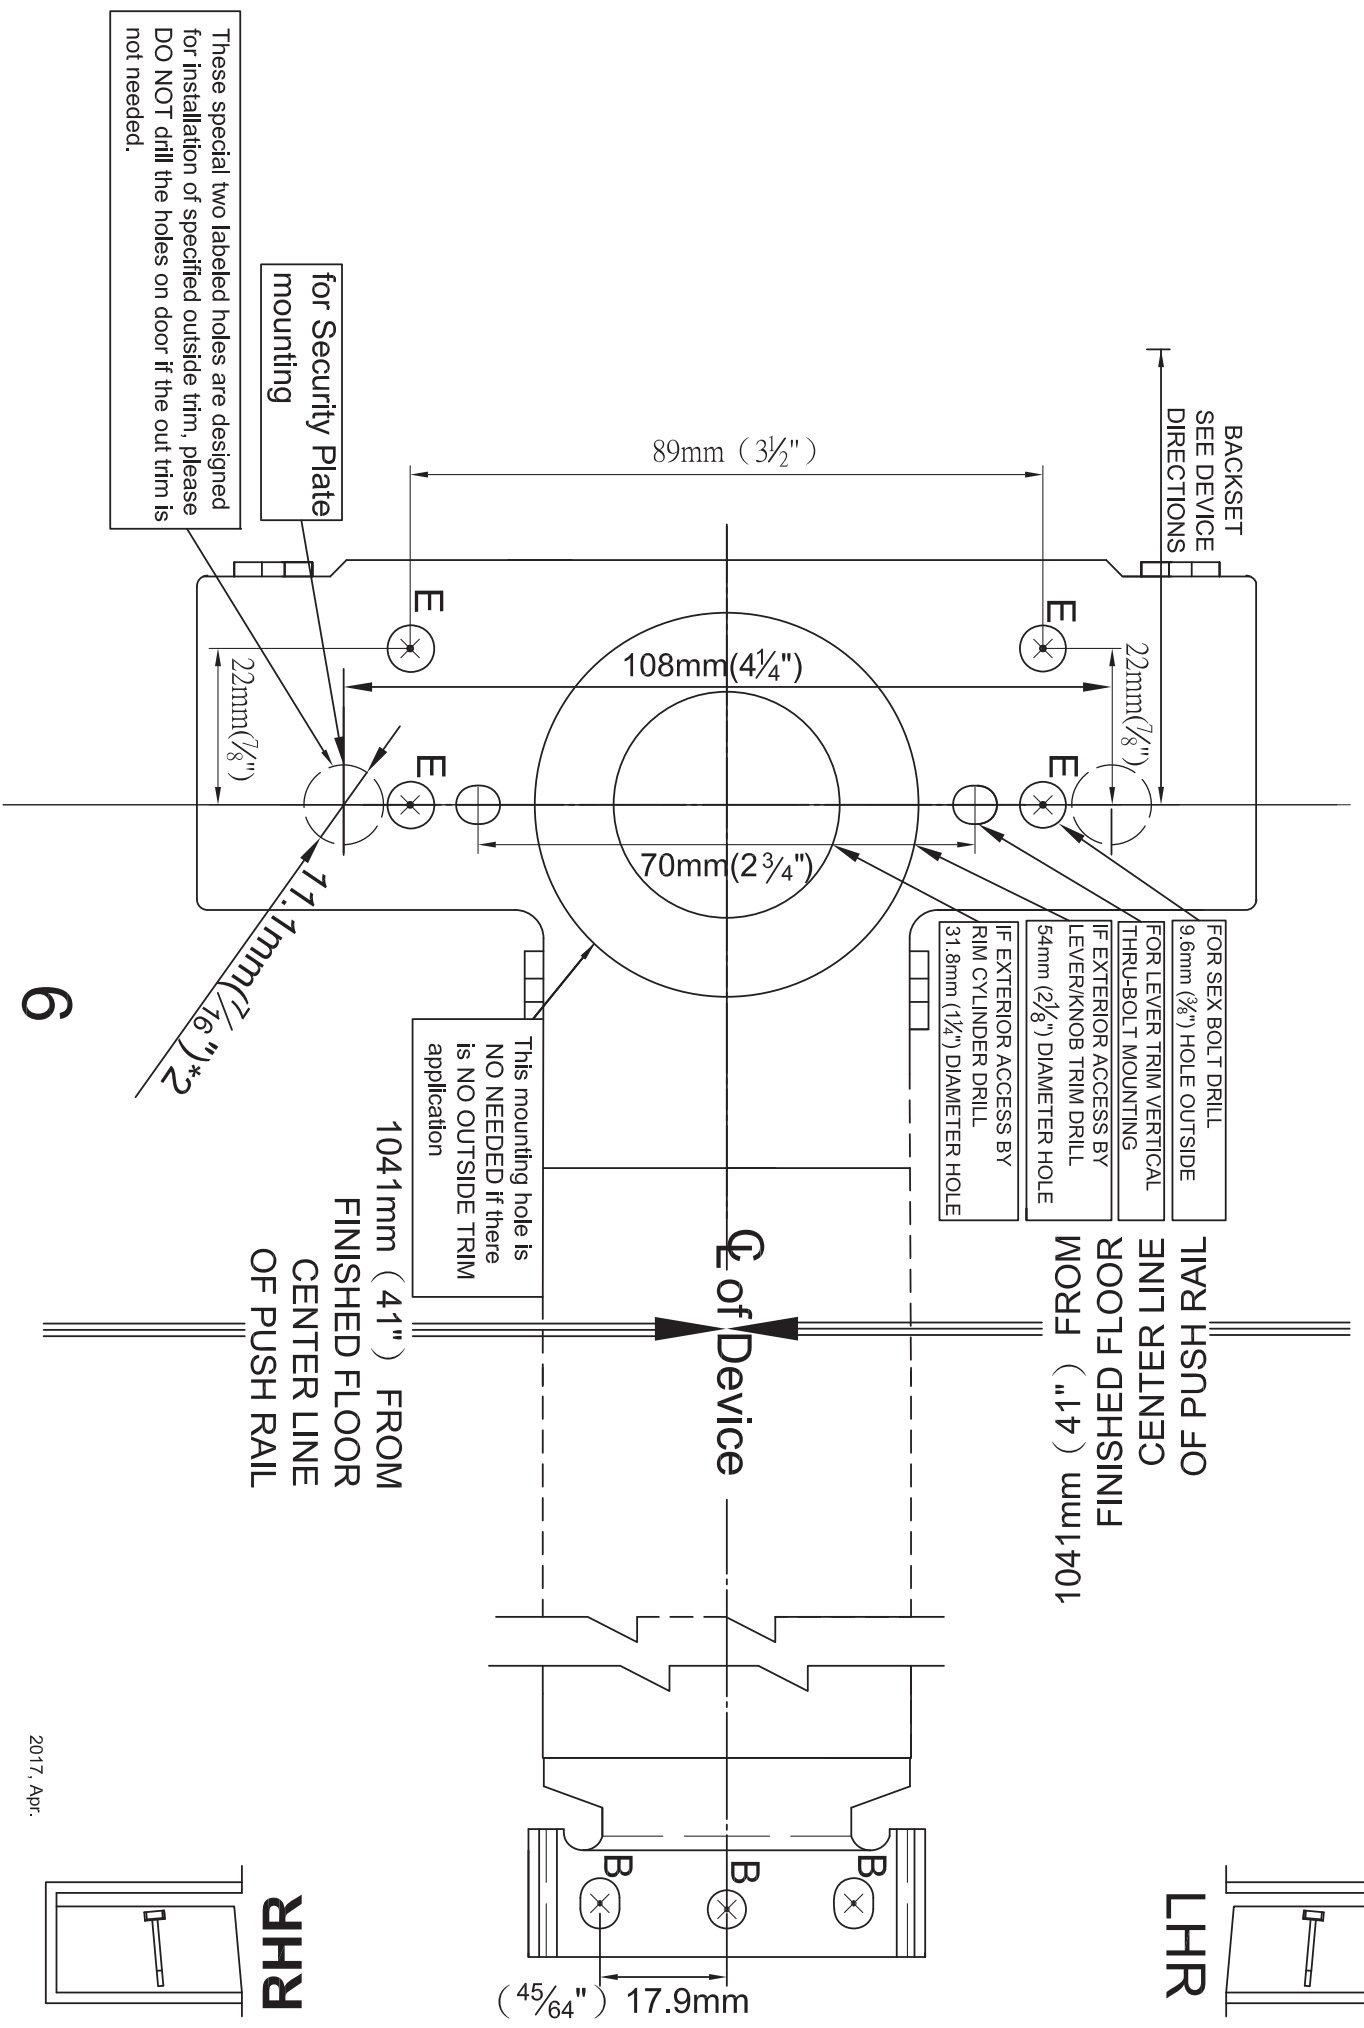

These special two labeled holes are designed for installation of specified outside trim, please DO NOT drill the holes on door if the out trim is not needed.



for Security Plate mounting

This mounting hole is NO NEEDED if there IS NO OUTSIDE TRIM application

THIS MOUNTING HOLE IS NO NEEDED IF THERE IS NO OUTSIDE TRIM application



TEMPLATE of Bottom LATCH (1:1)

Handicap Strike (Optional use)

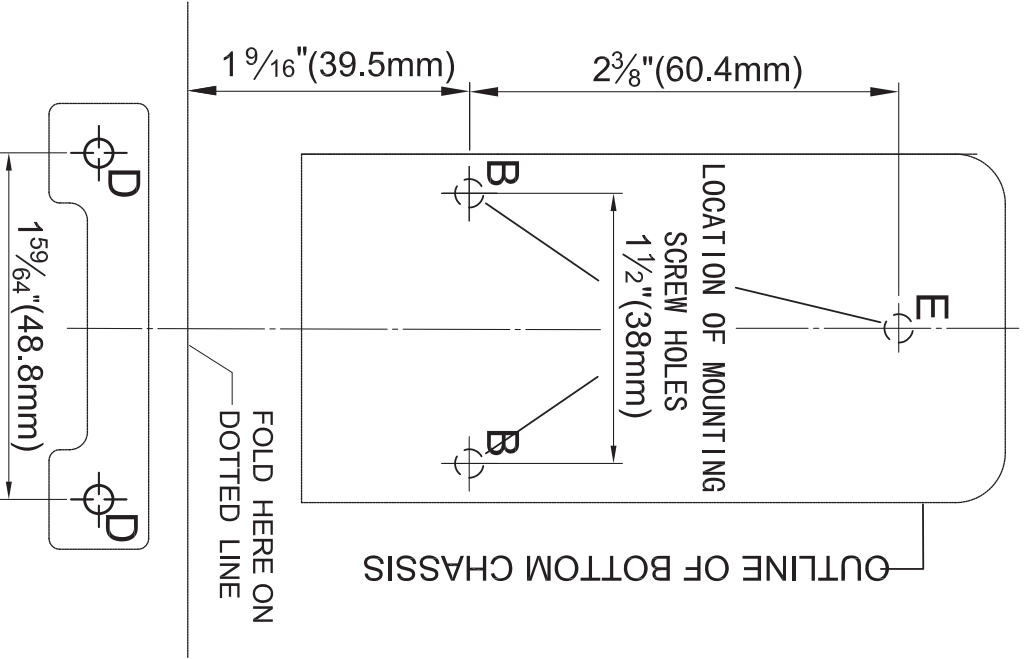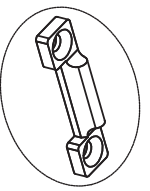

TEMPLATE of Bottom LATCH (1:1)

Surface Strike (regular use)

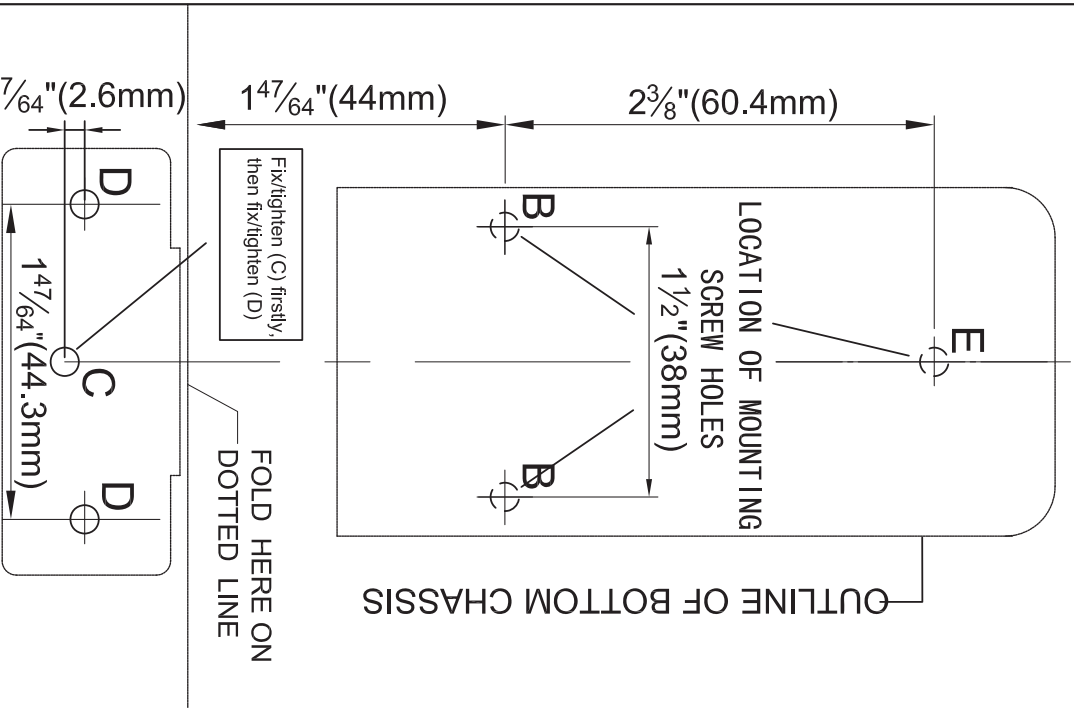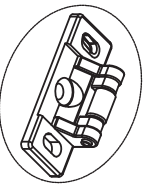

TEMPLATE of Top LATCH (1:1)

Top Strike (regular use)

