



COAXIAL CABLES - CABLE TRIM SPEC IFICATION


BNC - PLUG, MALE RG174, RG319, RG188

ASSEMBLY INSTRUCTIONS

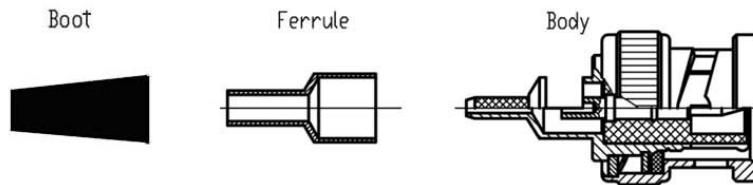


1

- 1-1 Place boot and ferrule onto the cable
- 1-2 Strip the cable as shown




2

- 2-1 Disperse Shielding layer of the cable.

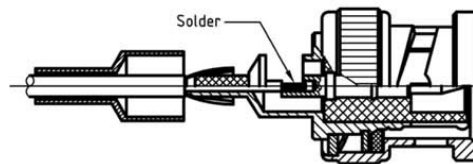

3

- 3-1 Position the body onto the cable
- 3-2 Solder the contact
- 3-3 Push the ferrule onto the body.

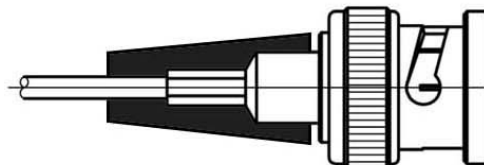

4

- 4-1 Crimp ferrule with 4.52 mm Hex Crimp Die
- 4-2 Pull the boot over the ferrule