


Standard Installation-Railings up to 2" Square/Round

(Special large dia. post "no-drill" adapter kits available - Contact PS DOORS)

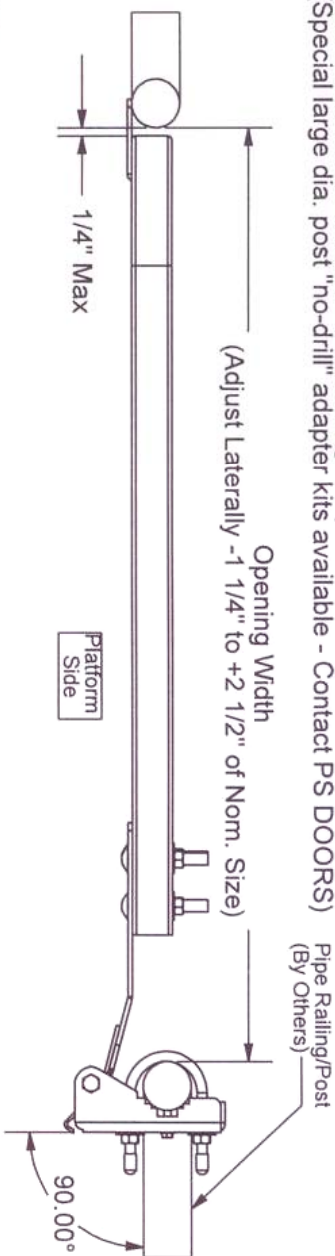


Note:
Contact PS DOORS for special installations/or modifications.

Always field verify completed installation for adequate performance.


Installing on Angle Iron/Flat Stock Railing - (Angle Iron Shown)

(Special "no-drill" adapter kits available - Contact PS DOORS)

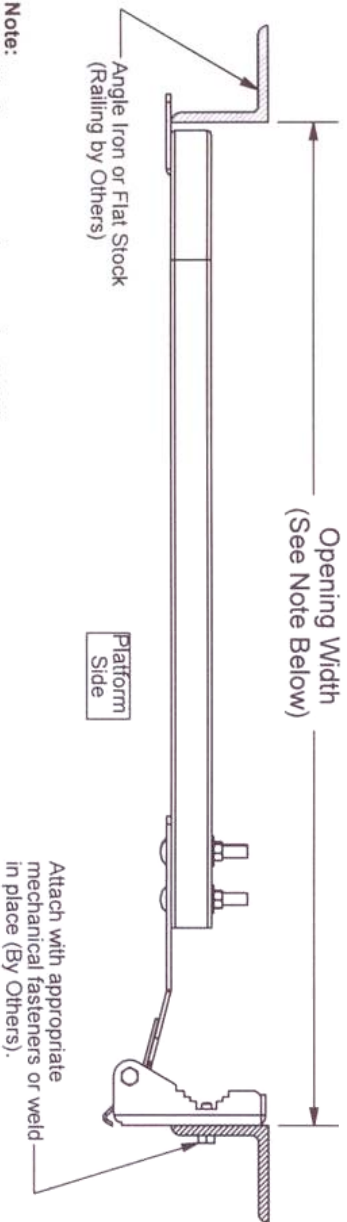

Note:
For inside face mount order gate size 2 1/2" narrower than opening width (see above diagram).
Contact PS DOORS for special installations/ or modifications.

Installing on Wall/Flat Surface

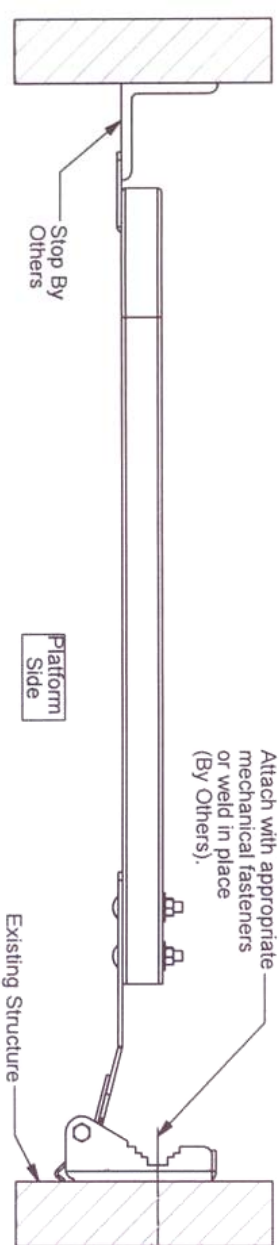

Note:
For inside face mount order gate size 2 1/2" narrower than opening width (see above diagram).
Contact PS DOORS for special installations/ or modifications.



Distributed by: **Safety Gate Shop**
Toronto, Canada
www.safetygateshop.com
sales@safetygateshop.com

Ladder Safety Gate Installation Instructions

Tools Required:
- 1/2" deep socket or wrench(U-bolt installation)

The steps below are a general guideline for a single gate installation on a railing post up to 2" square/round. Individual installation may vary, therefore, load capabilities of a gate are dependent on proper installation and existing structure. **Always field verify completed installation for adequate performance.**

Step 1:
Loosely attach ladder safety gate hinge assemblies to vertical column of railing with provided U-bolts (or select appropriate field fasteners for other types of installation). Do not tighten, as additional adjustment may be required.

Step 2:
Adjust top of safety gate to match top of railing.

Step 3:
Align hinge bracket to be perpendicular (90°) to ladder safety gate and opening.

Step 4:
Adjust gate hoop to proper opening width. This can be achieved by selecting any combination of two of the three bolt holes at connection point for hinge plate and gate. **Insure stop plate overlaps and contacts adjacent vertical column of railing system (opposite of hinge side) allowing for 1/4" max. of clearance.** Tighten carriage bolts once at desired width.

Step 5:
Operate gate through full swing range (180 degree max.) to insure proper alignment before permanent attachment. If mounting to pipe/railing, tighten each U-bolt to 20 ft/lbs. of torque and **field verify for adequate attachment (all types of installations).**

Special Applications: Contact PS DOORS for optional "no-drill" adapter kits for large dia., flat bar, and angle iron posts.