
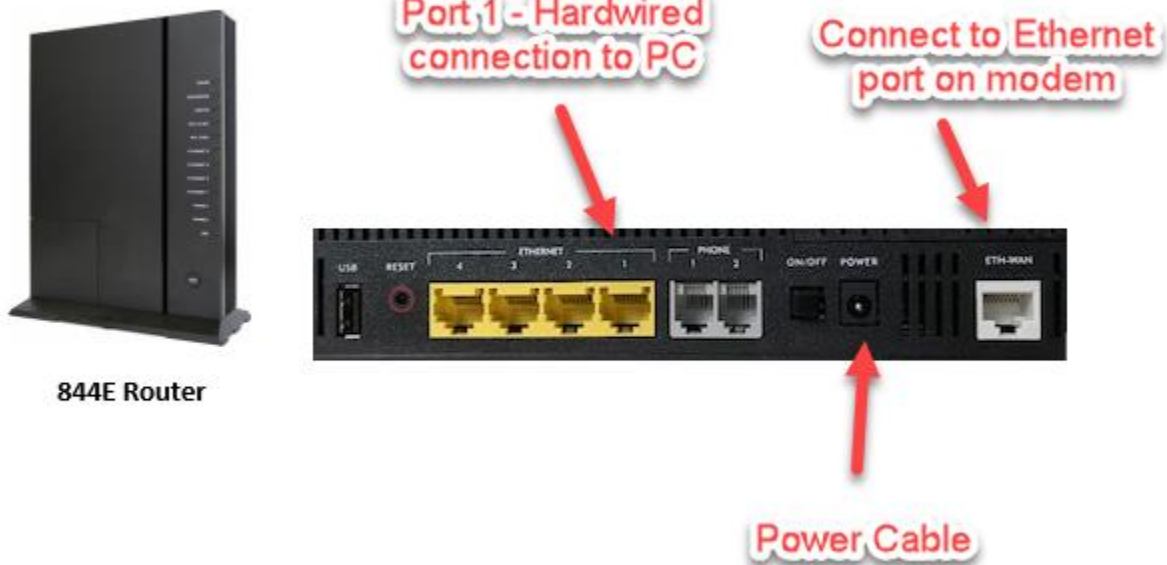


## ADSL Customer Installation Guide with WIFI Router

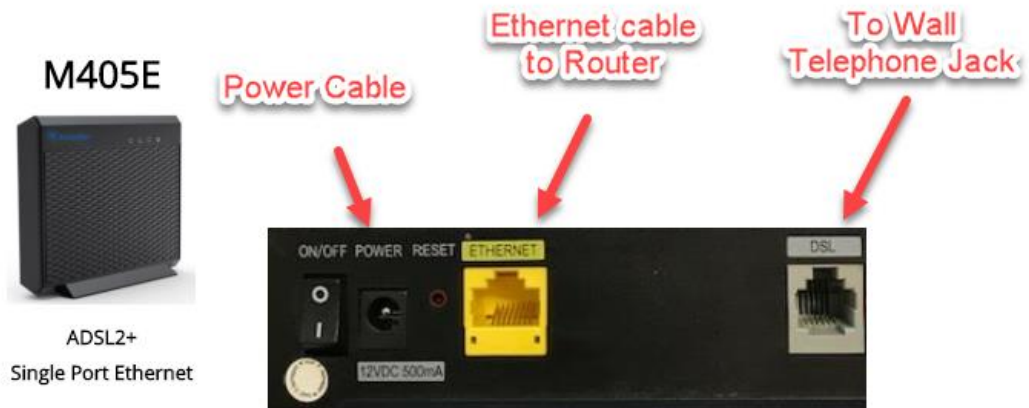

1. Connect the M405 Modem to a power outlet
2. Connect the M405 Modem DSL port to a telephone wall Jack
3. Wait for DSL light to become solid Green, this could take up to 60 seconds
4. Connect Ethernet cable from M405 Modem Ethernet port to 844E Router Eth-Wan port
5. Connect 844E to a power outlet
6. Wait approximately 60 seconds for the router to boot up
7. You can also connect a PC to Ethernet port 1 on the 844E for internet access

SSID 2.4Ghz \_\_\_\_\_ Password \_\_\_\_\_  
SSID 5Ghz \_\_\_\_\_ Password \_\_\_\_\_

### **WIFI Router Placement Tips:**

- Place the 844E router in a high, centralized location
- Pick a place that has good air circulation away from electronics
- Try to avoid placing the 844E router near the following:
  - Cordless phones
  - Microwaves
  - Computer monitors
  - Wireless video cameras
  - Windows
  - Bluetooth devices
  - Reflective surfaces
  - Reinforced concrete
  - Metal partitions, fixtures
  - Sprinklers, and pipes

**Note:** If you have landline telephone service you will have to install in line filters on each phone line between the wall jack and telephone base. Request this filter from the technician or contact Surry Communications customer service.

