




APPLICATION

1

Apply an even roller coat of mixed material to the project area. Coating must be applied within 30 minutes of mixing Part A and Part B.

We recommend pouring the material directly onto the project surface, then spreading it as desired.

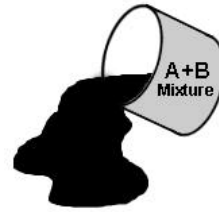

2

A single, thorough coating is sufficient for product performance. Do not apply too thickly.

Tip: *Quality rollers and roller covers are recommended. Roller nap is a matter of preference, but 3/8 inch rollers generally work well.*

3

Clean-up

Clean equipment using acetone or other solvent before coating cures.

WARNING! ONCE COATING HAS CURED IT IS EXTREMELY DIFFICULT TO REMOVE. CLEAN ANY SPILLS OR SPATTERS IMMEDIATELY!

Discard cans, roller covers, brushes, rags etc. The material is not regulated as hazardous waste.

Do not re-cap containers of A+B mixture.

Curing time depends on ambient and surface temperature. Heat will accelerate the cure time. Generally, coating will cure overnight. Ultra Poly One Coat is self-curing - if the top is cured, the entire coating is cured.