


ALUMINUM COVE INSTALLATION INSTRUCTIONS - KNIFE EDGE JOINT ASSEMBLY

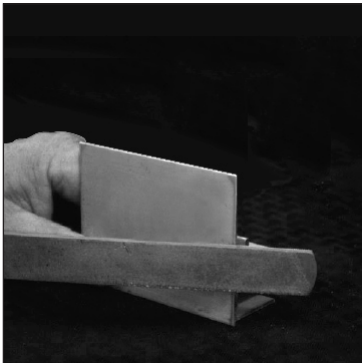


STEP 1

Use metal file to bevel edges that will be joined.



STEP 2

Insert cove onto drywall as shown in steps 1 & 2 of cove installation instructions.

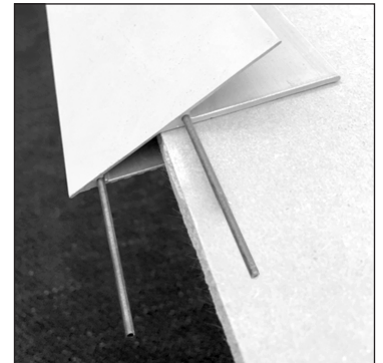

STEP 3


Insert two Cove Splice Pins into alignment holes as shown.



STEP 4


Slide alignment pins into extrusion leaving pins about 1" protruding.

Insert second cove section onto drywall as shown.

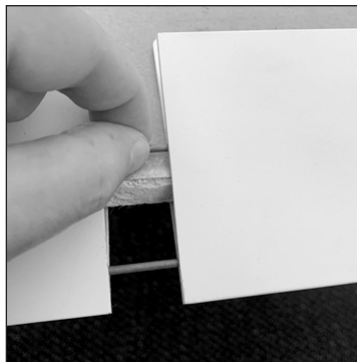

STEP 5

Push alignment pins about 2" into second cove section.

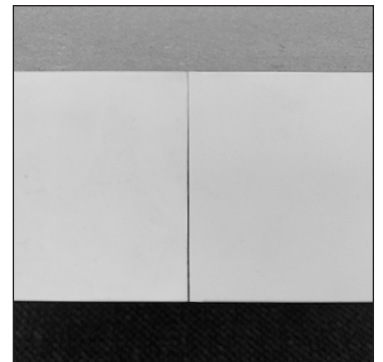

STEP 6

Slide second cove section flush to first section & fasten to drywall with supplied 1 inch self-tapping screws every 12 to 18 inches.

(See Step 3 of cove installation Instructions on page 2.)



STEP 7

Apply sandable epoxy (P/N ACA-SCF) to face of joint, let set and sand flush. Mud & finish bottom of light cove as required then primer and paint.

(Loctite Metal/Concrete Epoxy)

KNIFE EDGE CORNER ASSEMBLY:

Same method as Joint assembly shown above. Use two Cove Splice Pins on each end of corner to align with the straight Knife Edge cove.