



E1



E2



E2LC



E4H



E2 WS



Our goal is to become the foundation upon which your success is built!

### E-SERIES MAINTENANCE INSTRUCTIONS

*“Only trained authorized personnel are allowed to operate equipment”*

**Congratulations** on your purchase of LTW’s industrial E-Series electrically height adjustable lift base, workstation, platform, or pillar! Your product is made in the USA in the great state of Michigan. Below are some guidelines to help maintain your product and promote its longevity.

**Synchronizing Actuators:** As of 2017, all of our lift systems have built-in synchronous controllers and actuators that will ensure parallel operation.

**Initial installation and synchronization:** After plugging in all actuators to the controller, plugging in the hand switch, and plugging in the main power cable, ensure that the area around the lift is safe to operate. Press the down button until all actuators are lowered, then release the button. Press the down button once again and then continue holding the down button for a minimum of five seconds. This will re-sync the actuators

**Re-synchronization if needed:** If there becomes a situation where these systems do not raise, repeat the synchronizing process above. This will re-sync the actuators, and proper operation should be restored. If operation still does not function properly, please contact LTW.

**Steel Slider Frames:** Your product is manufactured with a heavy duty welded steel frame. The slider frames utilize a combination of bearings that ride on the steel tubing. To ensure that these frames slide properly and efficiently, we recommend using one of two factory dry PTFE lubricants below on each of the inner slider frame legs on a monthly basis or as needed.

- [WD-40 Specialist Anti-Friction Dry PTFE Lubricant](#)
- [CRC Industrial Dry PTFE Lube No. 03044](#)

**Cleaning Frames & Lift System:** It is recommended to use a damp cloth without solvents on all surfaces to remove dust and soil. If it is necessary to clean with anything else, please consult LTW prior to doing so.

**Faulty or Broken Parts:** If you notice any faulty or broken parts on your product, please consult with LTW for obtaining a solution or replacement parts if needed before continuing to use. Failure to do this may result in injury to personnel and/or the product.


*Thank you again for purchasing LTW products. We look forward to helping you with your next project!*



E2 Tilt WS



E4 EP

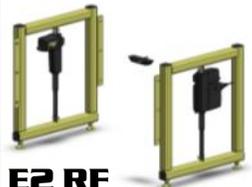

E2 RF



E1 WS



E1 Triple WS



E1 Cart




Rev 01.11.2018

**PROUDLY MADE IN THE USA! • CALL US TODAY!**

Phone: (269) 674-8877 • Fax: (269) 674-7788 • E-mail: Sales@LTW1.com

311 S. Paw Paw St. • P.O. Box 680 • Lawrence, MI USA 49064

**www.LTW1.com**

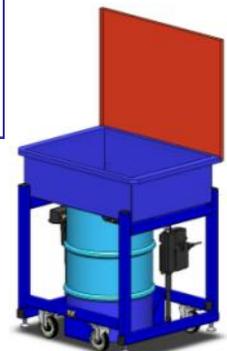

E2 PW